

Hardware:



Drywall Anchor




5/8" Coarse Drywall Screw

Tools Required:



Screwdriver



Level




Pen or Pencil

Step One:

Reference previous assembly guide to build entire frame. Ensure that all hardware is tightened and that your frame has 14 holes in order to wall mount.

Step Two:

Locate the lightbox frame on the wall at the desired position. Level the frame and mark the location of the pre-drilled holes in the frame on the wall.

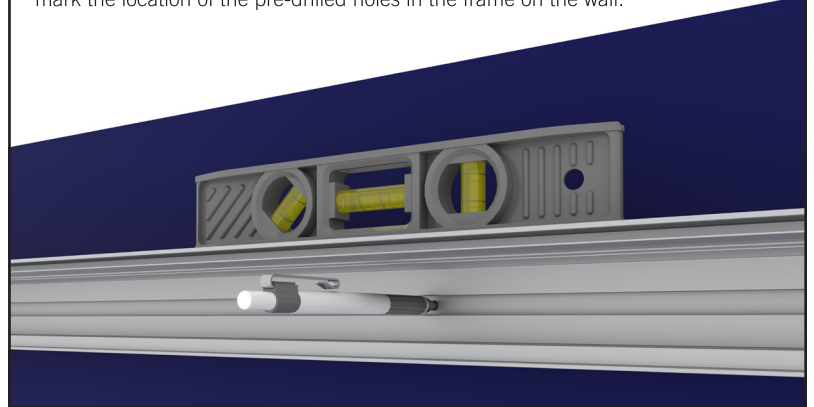

Step Three:

Center the point of the drywall anchor to the marks on the wall. Apply forward pressure with a screwdriver as the anchor self-drills into the wall. Continue to apply pressure as the threads grab the drywall so the anchor does not spin and dig out the drywall. Screw the anchor into the wall until it is flush to the face of the wall.

