

WET Adhesive Application Instructions


40 VISUALS

Adhesive Vinyl

Invisa-view (1st Surface)

Ultra Clear Cling

White Cling

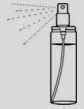

Glass surface must be cleaned using mild soap and water.

DO NOT use cleaners with solvents (ex. Windex). Use lint free cloth or industrial paper towels to dry surface.



Temperature of glass must be moderate –between approx.

40° F (5° C) and 90° F (32° C).



Cold weather, apply in the late afternoon when windows are warmest. Applying when too cold may affect adhesion of material.



Hot weather, apply in the early morning when windows are coolest. Applying when too hot can cause stretching during installation.

- 1 Lift the upper edge of the liner away from the graphic and fold back approximately 3-6 inches (depending on the size of the graphic).
- 2 Using the provided spray bottle, fill with a mix of water and a couple drops of hand soap. Cover window thoroughly with solution. Remove graphic from liner. Position image on window and slide to align on all sides.
- 3 Using the provided felt squeegee or your hand lightly press the material in place. Start from the middle of the graphic and squeegee toward the outside edges to remove all excess water or air bubbles.
- 4 Clean up excess water with a lint free cloth or paper towel.



? Please give us a call, 800-962-3119